



2 1/2" & 2 7/8"
Glide Hook

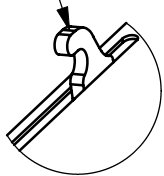

3 1/2" & 5" Glide Hook
With Cable Guide

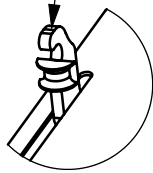

HOOK STYLES

NOTE: Larger Framework Will Have Glide Hooks With A Separate Position For The Cable. For Standard Glide Elbows Both The Cable And Fabric Are Positioned Over Hook.

Glide Elbow

Protective Cover
Drain Opening
At The Bottom

Washer

Retainer Bolt

PROTECTIVE COVER

NOTE: Remove Protective Cover From End Of Glide Elbows.

GLIDE ADJUSTMENT

NOTE: Rotate Hex Nut With Hand Tool To Adjust All Glide Hooks To The Top Of Slots Before Installing Fabric.

Top Of Slot

Fabric Cover

Cable

Hook & Cable Guide

Glide Elbow

FABRIC INSTALLATION

NOTE: Pull Cable Over Hook Into Cable Guide. Pull Hole In Fabric Corner Over Hook. This Applies To Three Of Four fabric Corners.

NOTE: Cross Cable Ends Within Cable Guide. Pull Cables Tight To Remove Any Slack. Secure With Two Cable Clamps On Either Side Of Guide. Pull Strap On Fabric Corner Over Hook Followed By The Hole In Fabric. Tuck Loose cable Ends Back Into Fabric Hems.

Cable Clamps

Cable Clamps

Glide hook

SECURE CABLE ENDS

FABRIC TENSION

NOTE: Rotate Glide Hex Nuts Equally With Hand Tool To Adjust Cable And Fabric Tension.

SUPERIOR SHADE

DESCRIPTION:
GLIDE ELBOW DETAILS

SHEET:
3 OF 3